

MEASURING YOUR WINDOWS

We pre-cut all window film to make installation easier and quicker for the installers. We add 20mm to the actual height and width measurements you enter into WebQuote and these measurements are sent to the Australian office of the film manufacturer to cut the film. Please ensure that your measurements are accurate to within 5mm.




The film is couriered direct to you ready for installation. If you selected professional film installation, the film installer will be notified of your job and will call you to schedule a date for installation.

Worksheet


Print our Worksheet and use it to record the window pane size measurements.

How to Measure for Window Film?

Always measure your windows as if they were a rectangle or square even if they are rounded. Measurements should be taken in millimetres (mm) ready to enter into WebQuote.

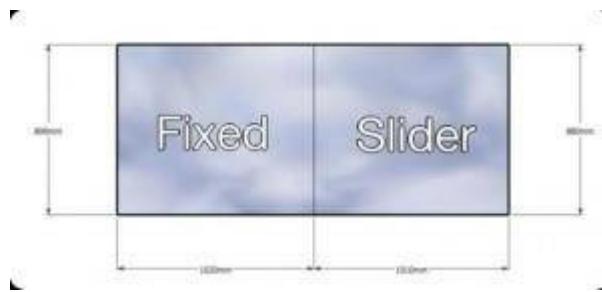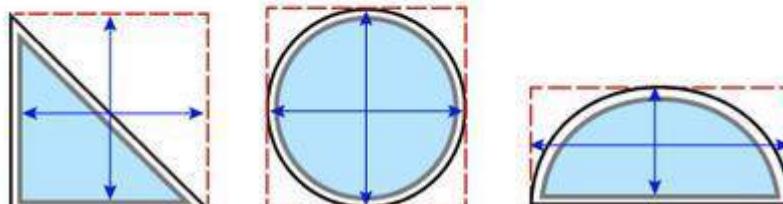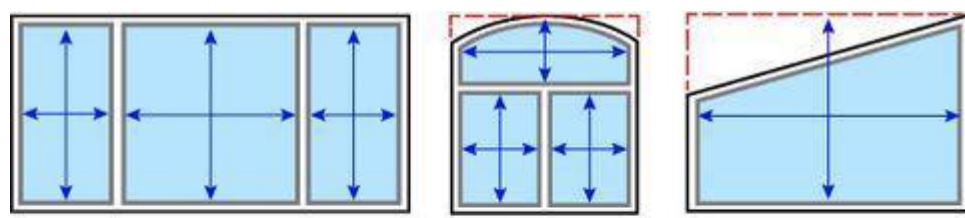

A basic two pane fixed/slider is the most common window type found in bedrooms, studies, bathrooms and garages. In many cases, the fixed pane is slightly larger than the slider. It's important to measure both, just in case.

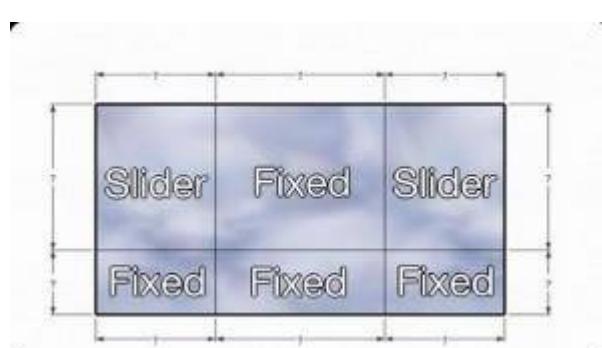

A larger six panel window like this is more common in the living areas of your home. They come in many configurations and varying widths and slider combinations.

Measure each window pane to be tinted and record on the Worksheet. Then record the number of panes of that size (You do not need to add 20mm for custom fitting – WebQuote does that).

Window film is manufactured in different roll widths – some standard roll widths are 610mm, 912mm, 1220mm, 1524mm and 1829mm. Not all films are available in all roll widths. Some lower volume films may only be supplied in one or two roll widths. The WebQuote has been programmed to quote your job using the most efficient roll width available for that film. If WebQuote has calculated a film quantity much higher than you expected this will be the reason. To reduce wastage off the roll consider selecting a different film that may be available in roll widths better suited to your window pane sizes.

DO NOT ASSUME

DO NOT ASSUME THE FIXED PANE AND THE SLIDING WINDOW PANE ARE THE SAME SIZE (the fixed pane is often a bit larger)
DO NOT ASSUME ONE FULL SIZE PANE IS THE SAME WIDTH AS ADJACENT PANES
MEASURE EACH PANE TO BE SURE

When you have recorded all your window measurements on the Worksheet, you can then enter the measurements into WebQuote, calculate the cost of film and of film installation, request film samples be posted to you and receive a WebQuote emailed to you.

Please note:

We are not responsible for any errors that result from inaccurate measuring of windows or due to errors entering the measurements into WebQuote.

- If you do not feel confident that you can accurately measure your windows and enter those measurements into the WebQuote, please book a free quote from a sales rep

WINDOW FILM WORKSHEET

ALL MEASUREMENTS ARE TO BE ENTERED IN MILLIMETERS.